


Green Mountain soapstone Corporation

KOJO mounting of the freestanding fireplace for SCAN DSA4 Fire Place Insert

With
compartment

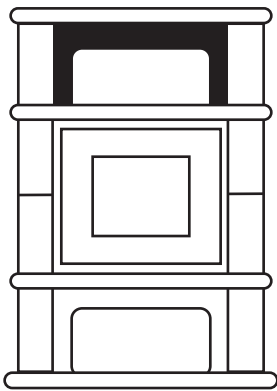


Easy to mount



KOJO is mounted only with clips and steering irons. No need for sealing compound. Therefore it is also easy to dismount it again.

- CL1 Clips between stones in the fireplace level, 6 pieces
- CL2 Clips between the other stones, 24 pieces
- CL3 Steering iron between stones in the compartment, 8 pieces
- CL4 Clips between stones in the compartment, 8 pieces
- CL5 Clips between front stones in the fireplace level, 2 pieces
- Fireplace insert - DSA-4-52 by SCAN
- Connecting Piece - "Access" by SCAN


Plan of the fireplace

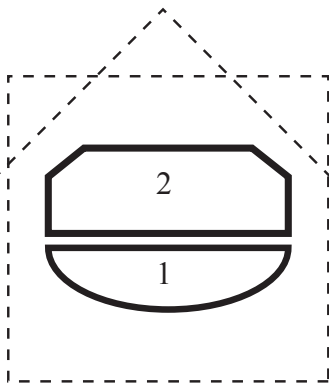

The shape depends on the placement of the fireplace. Corner or wall mounting. KOJO must always be placed min. 100 mm.(4") from the wall.

KOJO weighs 590 kg. (1300lbs) and demands a fortified floor.


Bottom - magazine

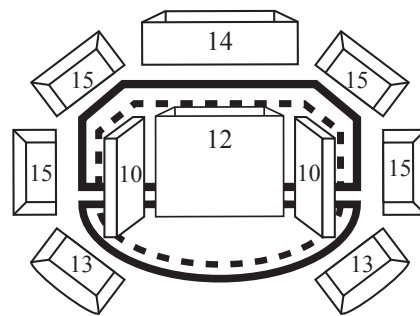


Front - magazine



Top of magazine

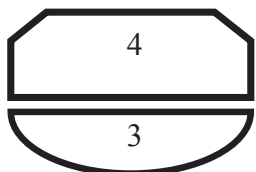


Place Fire place now

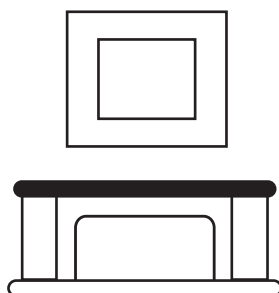


Connecting piece






Offset Stove pipe
1 5/8" (40mm) center displacement

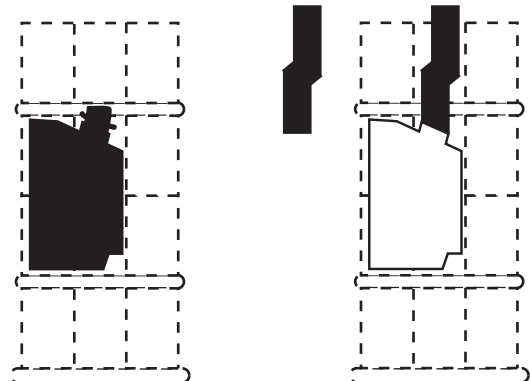

Fireplace level

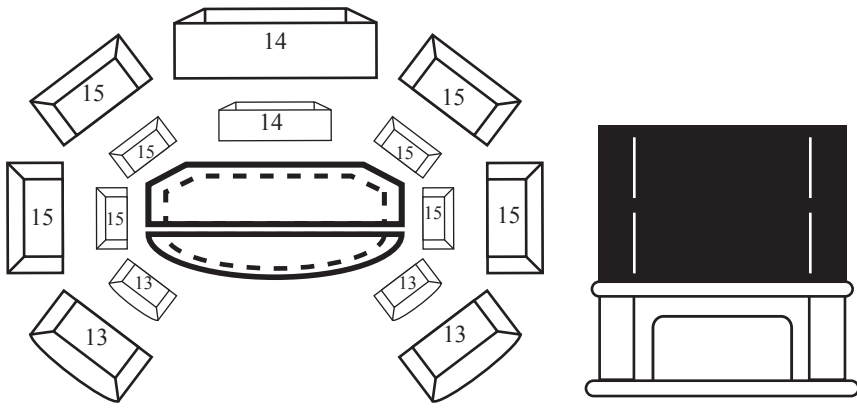

Top between insert and compartment

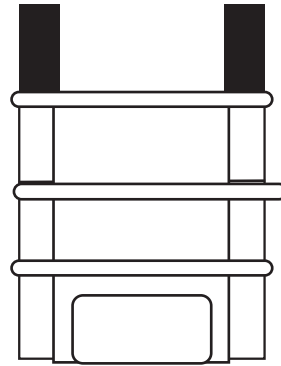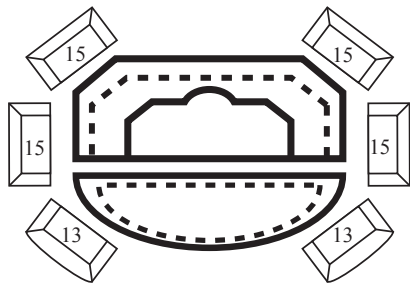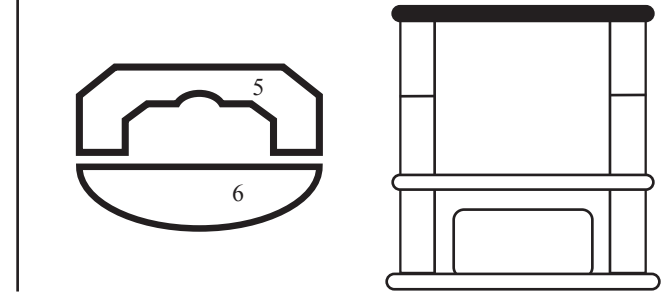

Top mounting with compartment

